



90% Variable
With 18 Seer Dual
Fuel Wiring



Freedom 90® Comfort-R™




Heritage® 18
Heat Pump

1 2 3

R B W1 W2 Y1 Y2 G

R B X2 Y1 Y2 O

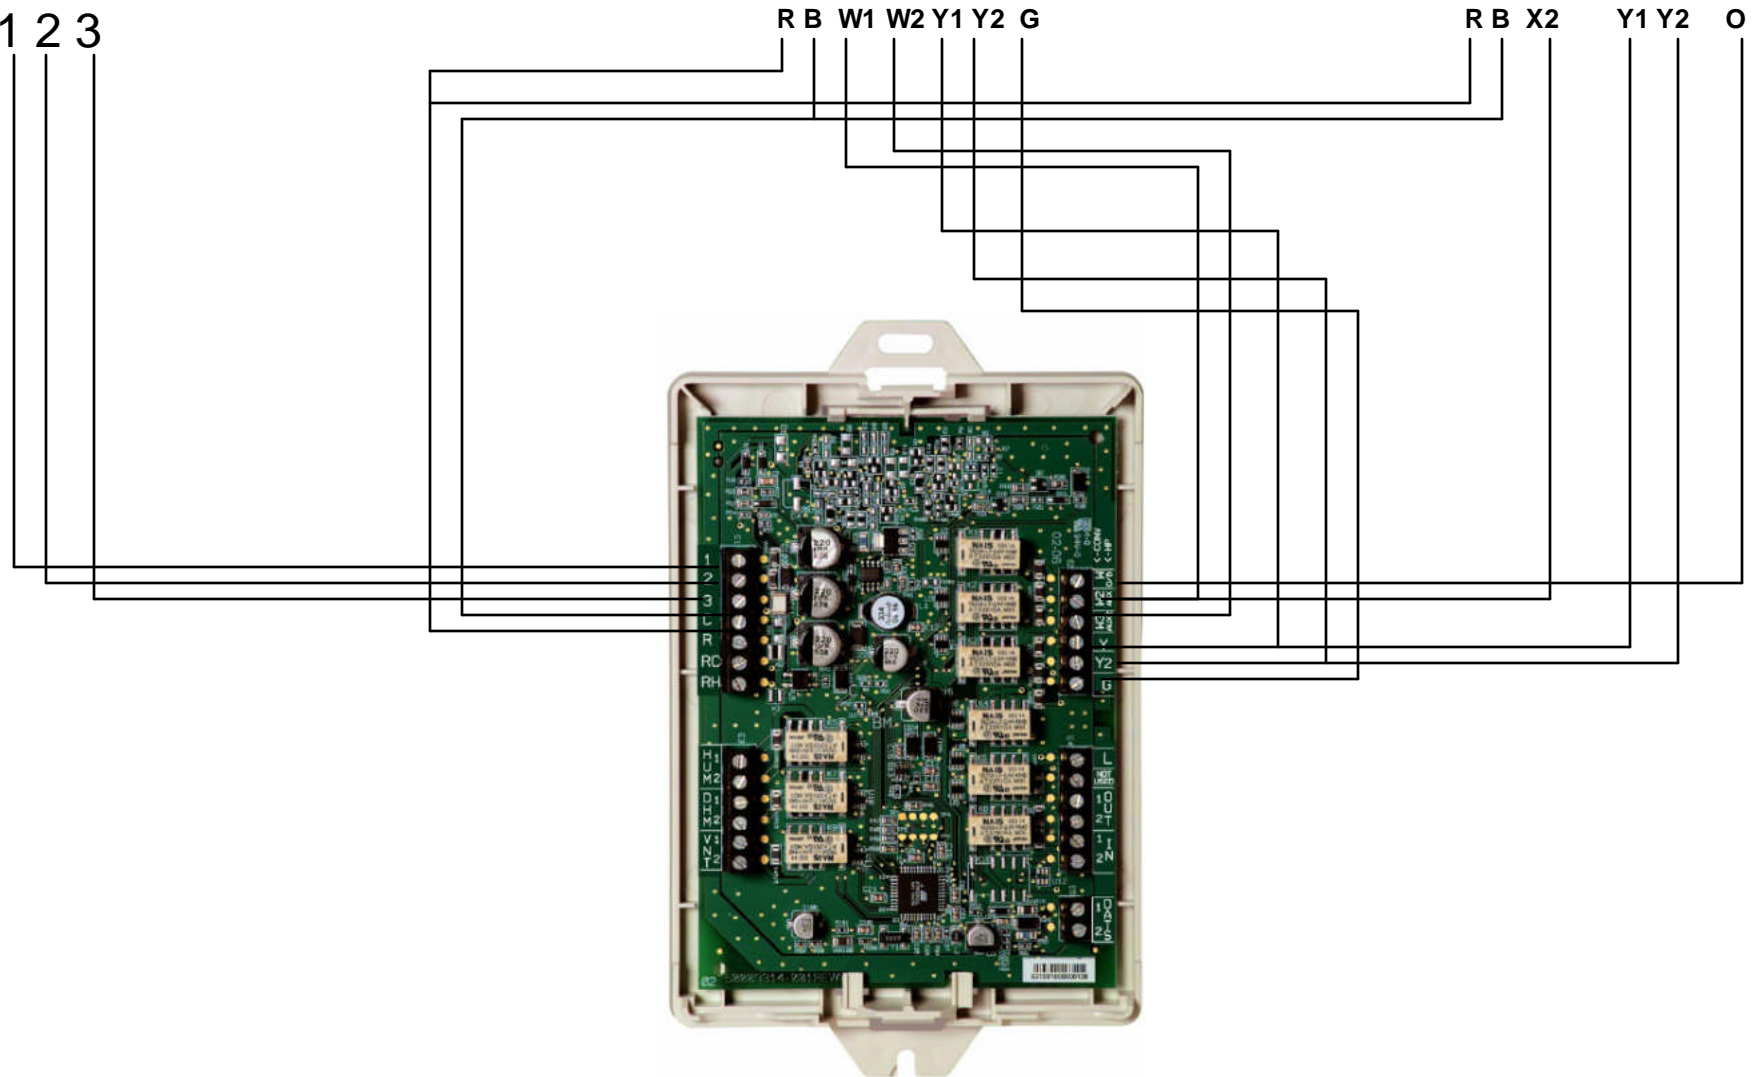



90% Variable
With 16 Seer Dual
Fuel Wiring



Freedom 90[®] Comfort-R™





Remove Jumper between
R and BK

1 2 3

Jump O and Red

O R B W1 W2 Y1 Y2 G BK

R B X2 W2 Y1 Y2 O

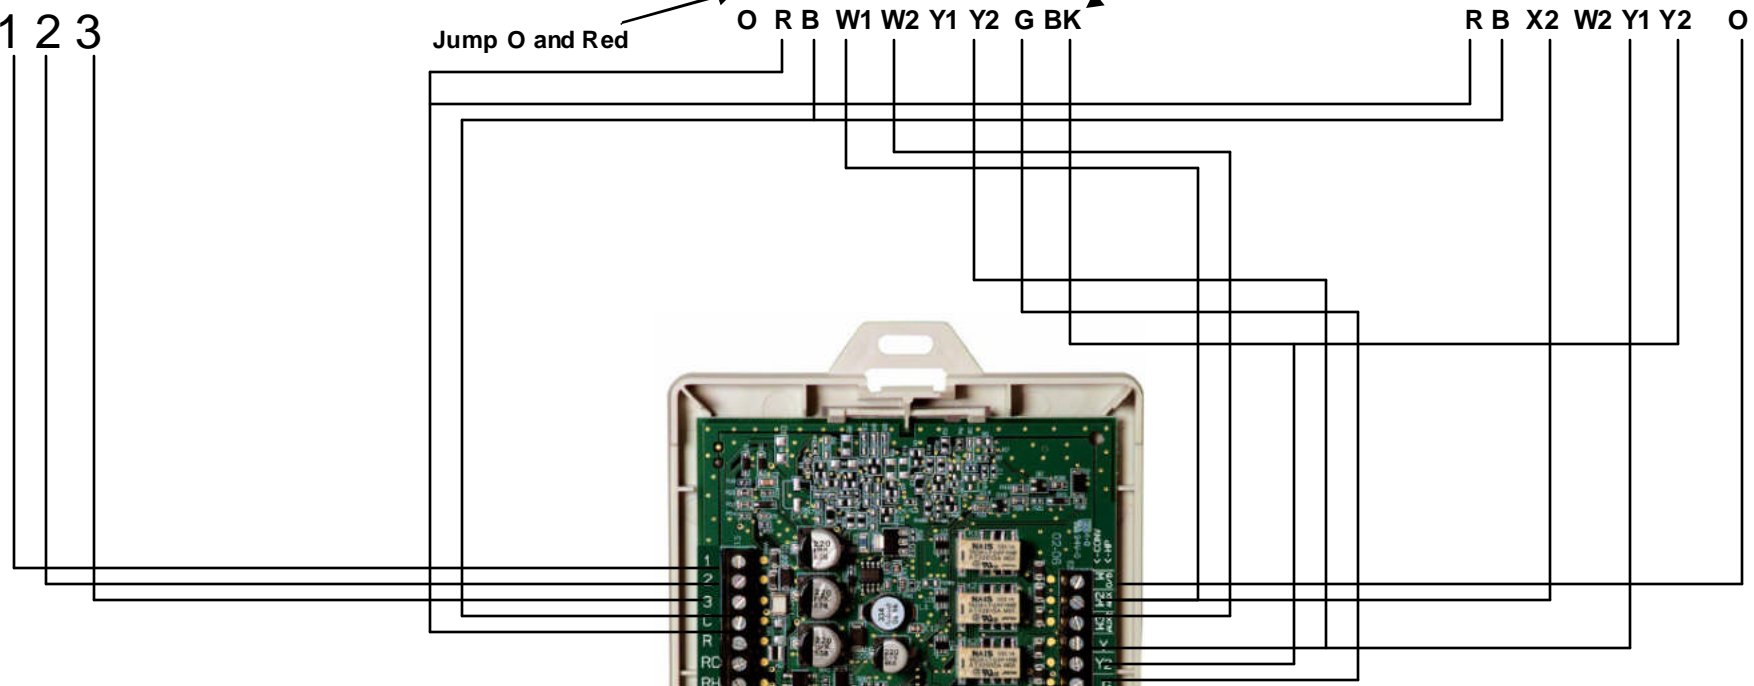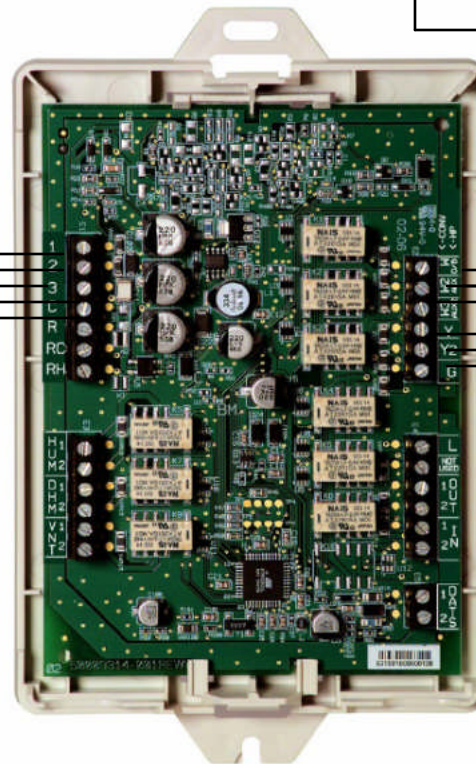



90% Variable
With 18 Seer
wiring



Freedom 90[®] Comfort-R™




Allegiance[®] 18

1 2 3

R B W1 W2 Y1 Y2 G BK

R B

Y1 Y2

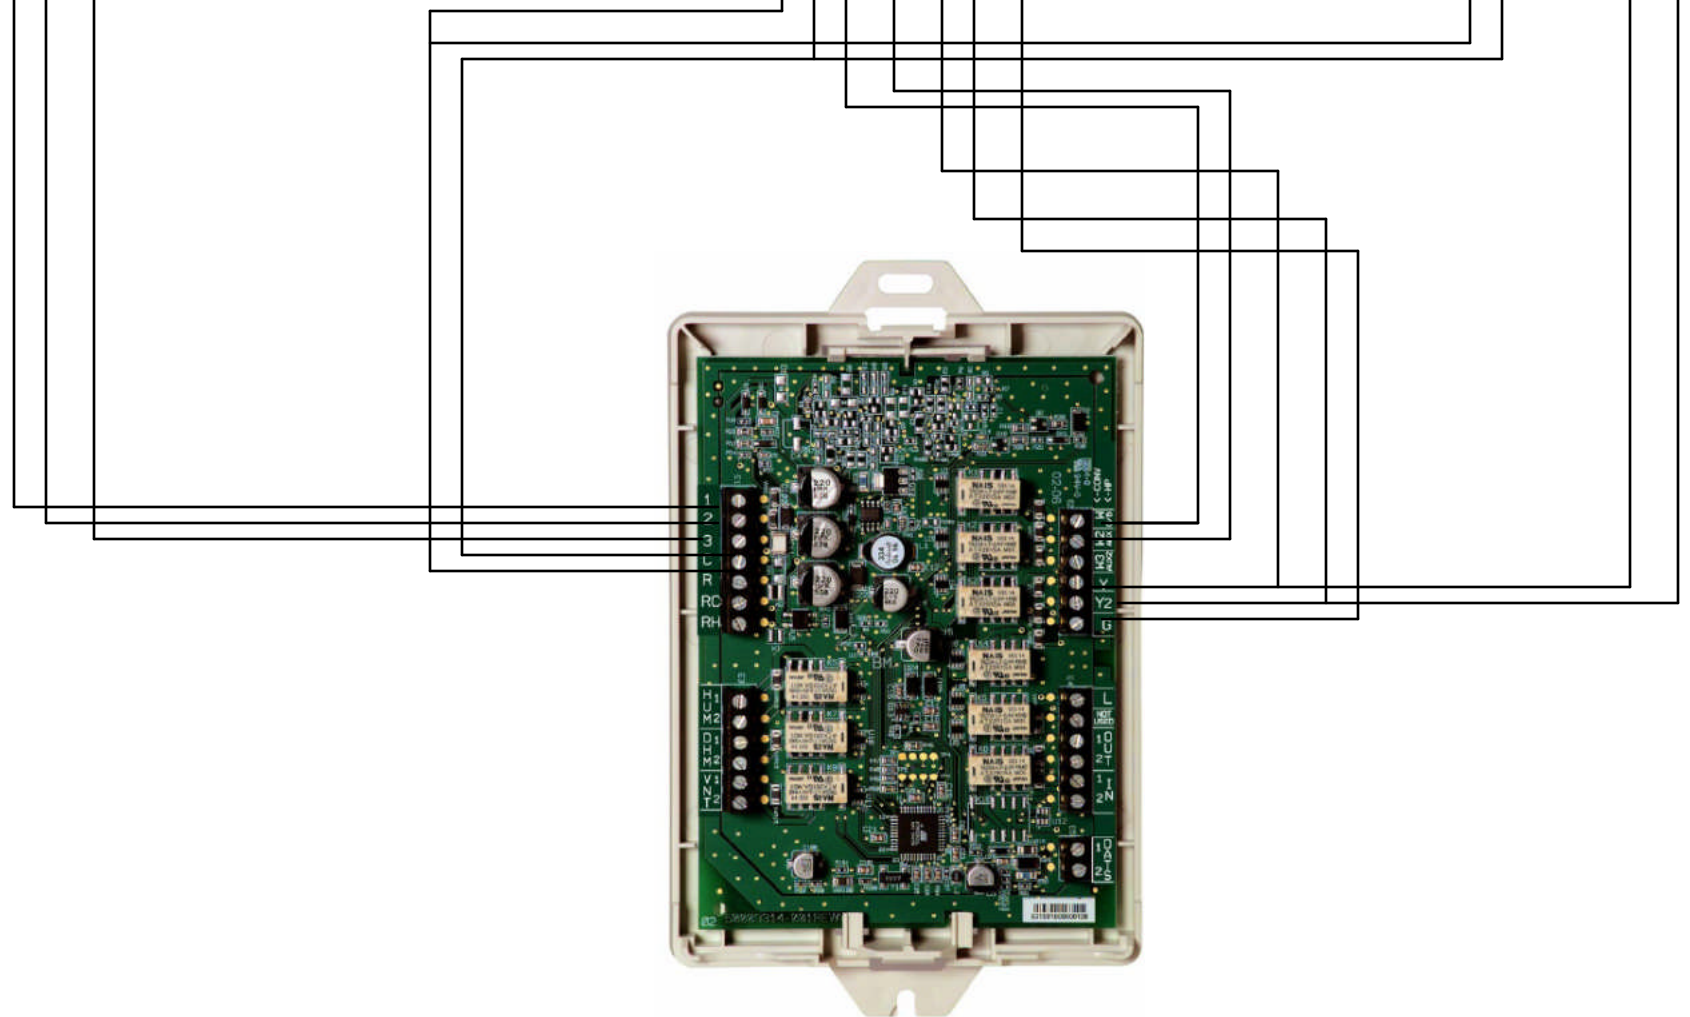



90% Variable
With 16 Seer
Wiring



Freedom 90[®] Comfort-R™



Remove Jumper between
R and BK

1 2 3

Jump O and Red

O R B W1 W2 Y1 Y2 G BK

R B

Y1 Y2

